

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
Audi	A4 [2000 - 2005]	A4 1,8 T	AVJ	150	2001	2002
Audi	A4 [2000 - 2005]	A4 1,8 T	BEX	190	2002	2005
Audi	A4 [2000 - 2005]	A4 1,8 T	BFB	163	2002	2005
Audi	A4 [2000 - 2005]	A4 1,8 T	BKB	163	2003	2005
Audi	A4 [2000 - 2005]	A4 1,9 TDI (PDI)	AVB	101	2001	2005
Audi	A4 [2000 - 2005]	A4 1,9 TDI (PDI)	AVF	130	2001	2005
Audi	A4 [2000 - 2005]	A4 1,9 TDI (PDI)	AWX	130	2001	2005
Audi	A4 [2000 - 2005]	A4 2,0	ALT	130	2001	2005
Audi	A4 [2000 - 2005]	A4 2,0 FSI	AWA	150	2002	2005
Audi	A4 [2000 - 2005]	A4 2,4	AMM	163	2001	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	AKE	179	2001	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	AYM	155	2001	2002
Audi	A4 [2000 - 2005]	A4 2,5 TDI	BAU	180	2000	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	BCZ	163	2002	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	BDG	163	2002	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	BDH	180	2000	2005
Audi	A4 [2000 - 2005]	A4 2,5 TDI	BFC	163	2002	2005
Audi	A4 [2000 - 2005]	A4 3,0	ASN	220	2001	2005
Audi	A4 [2000 - 2005]	A4 3,2 FSI	AUK	256	2005	2005
Audi	A4 Cabriolet	A4 2,4	AMM	163	2002	2008
BMW	3-series [E90] [2005 -]	318d	M47T2 - 204D4	122	2005	2008
BMW	3-series [E90] [2005 -]	318d	N47D20A	142	2007	2008
BMW	3-series [E90] [2005 -]	318d	N47D20B	142	2007	2008
BMW	3-series [E90] [2005 -]	318i	N43B20A	142	2007	2008
BMW	3-series [E90] [2005 -]	318i	N46B20B	129	2005	2008
BMW	3-series [E90] [2005 -]	320d	M47T2 - 204D4	150	2005	2008
BMW	3-series [E90] [2005 -]	320d	M47T2 - 204D4	163	2005	2008
BMW	3-series [E90] [2005 -]	320d	N47D20A	177	2007	2008
BMW	3-series [E90] [2005 -]	320i	N43B20A	170	2007	2008
BMW	3-series [E90] [2005 -]	320i	N46B20B	150	2005	2008
BMW	3-series [E90] [2005 -]	320si	N46B20B	173	2005	2008
BMW	3-series [E90] [2005 -]	325d	M57T2 306D3	197	2006	2008
BMW	3-series [E90] [2005 -]	325i	N52B25A	218	2005	2008
BMW	3-series [E90] [2005 -]	325i	N53B30A	218	2007	2008
BMW	3-series [E90] [2005 -]	325i Cabriolet	N52B25A	218	2007	2008
BMW	3-series [E90] [2005 -]	325xi	N52B25A	218	2007	2008
BMW	3-series [E90] [2005 -]	330d	M57T2 - 306D3	231	2005	2008

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
BMW	3-series [E90] [2005 -]	330i	N52B30A	258	2005	2008
BMW	3-series [E90] [2005 -]	330i	N53B30A	272	2007	2008
BMW	3-series [E90] [2005 -]	330i	N53B30B	272	2007	2008
BMW	3-series [E90] [2005 -]	330xi (E90)	N52KB30A	272	2007	2008
BMW	3-series [E90] [2005 -]	335d	M57T2 306D5	286	2006	2008
BMW	3-series [E90] [2005 -]	335i	N54B30A	306	2006	2008
BMW	3-series [E90] [2007 -]	330xi	N52B30N	272	2007	2008
BMW	3-series [E90] [2007 -]	330xi	N53B30A	272	2007	2008
BMW	3-series [E91] [2005 -]	318d Touring	M47T2 - 204D4	122	2005	2008
BMW	3-series [E91] [2005 -]	318d Touring	N47D20A	142	2007	2008
BMW	3-series [E91] [2005 -]	318d Touring	N47D20B	142	2007	2008
BMW	3-series [E91] [2005 -]	318i Touring	N43B20A	142	2007	2008
BMW	3-series [E91] [2005 -]	318i Touring	N46 B20B	129	2005	2008
BMW	3-series [E91] [2005 -]	320d Touring	M47T2 - 204D4	150	2005	2008
BMW	3-series [E91] [2005 -]	320d Touring	M47T2 - 204D4	163	2005	2008
BMW	3-series [E91] [2005 -]	320d Touring	N47D20A	177	2007	2008
BMW	3-series [E91] [2005 -]	320i Touring	N43B20A	170	2007	2008
BMW	3-series [E91] [2005 -]	320i Touring	N46B20A	150	2005	2008
BMW	3-series [E91] [2005 -]	320i Touring	N46B20B	150	2005	2008
BMW	3-series [E91] [2005 -]	325d Touring	M57T2 306D3	197	2006	2008
BMW	3-series [E91] [2005 -]	325i Touring	N52B25A	218	2005	2008
BMW	3-series [E91] [2005 -]	325i Touring	N53B30A	218	2007	2008
BMW	3-series [E91] [2005 -]	325xi Touring	N52B25A	218	2007	2008
BMW	3-series [E91] [2005 -]	330d Touring	M57T2 - 306D3	231	2005	2008
BMW	3-series [E91] [2005 -]	330i Touring	N53B30A	272	2007	2008
BMW	3-series [E91] [2005 -]	330i Touring	N53B30B	272	2007	2008
BMW	3-series [E91] [2005 -]	335d Touring	M57T2 306D5	286	2006	2008
BMW	3-series [E91] [2005 -]	335i Touring	N54B30A	306	2006	2008
BMW	3-series [E91] [2007 -]	330xi Touring	N52B30N	272	2007	2008
BMW	3-series [E91] [2007 -]	330xi Touring	N53B30A	272	2007	2008
BMW	3-series [E92] [2005 -]	320d Coupe	M47TU2 - 204 D4	177	2007	2008
BMW	3-series [E92] [2005 -]	320d Coupe	N47D20A	177	2007	2008
BMW	3-series [E92] [2005 -]	320i Coupe	N43B20A	170	2007	2008
BMW	3-series [E92] [2005 -]	320i Coupe	N46 B20A	170	2007	2008
BMW	3-series [E92] [2005 -]	325d Coupe	M57T2 306D3	197	2007	2008
BMW	3-series [E92] [2005 -]	325i Coupe	N52 B25A	218	2006	2008
BMW	3-series [E92] [2005 -]	325i Coupe	N53B30A	218	2007	2008

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
BMW	3-series [E92] [2005 -]	325xi Coupe	N52B25A	218	2007	2008
BMW	3-series [E92] [2005 -]	330d Coupe	M57TU2	231	2005	2008
BMW	3-series [E92] [2005 -]	330i Coupe	N52K B30A	272	2006	2008
BMW	3-series [E92] [2005 -]	330i Coupe	N52KB30A	258	2006	2008
BMW	3-series [E92] [2005 -]	330i Coupe	N53B30A	272	2007	2008
BMW	3-series [E92] [2005 -]	330i Coupe	N53B30B	272	2007	2008
BMW	3-series [E92] [2005 -]	330xi Coupe	N52B30N	272	2007	2008
BMW	3-series [E92] [2005 -]	330xi Coupe	N53B30A	272	2007	2008
BMW	3-series [E92] [2005 -]	335i Coupe	N54B30A	306	2006	2008
BMW	3-series [E93] [2007 -]	320i Cabriolet	N43B20A	170	2007	2008
BMW	3-series [E93] [2007 -]	320i Cabriolet	N46 B20A	170	2007	2008
BMW	3-series [E93] [2007 -]	325i Cabriolet	N52 B25A	218	2007	2008
BMW	3-series [E93] [2007 -]	325i Cabriolet	N53B30A	218	2007	2008
BMW	3-series [E93] [2007 -]	330d Cabriolet	M57TU2 - 306 D6	231	2007	2008
BMW	3-series [E93] [2007 -]	330i Cabriolet	N52KB30A	272	2007	2008
BMW	3-series [E93] [2007 -]	330i Cabriolet	N53B30A	272	2007	2008
BMW	3-series [E93] [2007 -]	330i Cabriolet	N53B30B	272	2007	2008
BMW	3-series [E93] [2007 -]	335i Cabriolet	N54B30A	306	2007	2008
Citroen	Jumper [1994 - 2002]	Jumper I 1,9 D	D9B	69	1994	2002
Citroen	Jumper [1994 - 2002]	Jumper I 1,9 TD	DHX	90	1994	2002
Citroen	Jumper [1994 - 2002]	Jumper I 2,0i 16V	RFW	110	1994	2001
Citroen	Jumper [1994 - 2002]	Jumper I 2,5 D	T9A	86	1994	1998
Citroen	Jumper [1994 - 2002]	Jumper I 2,5 TD (103)	T8A	103	1994	1998
Citroen	Jumper [1994 - 2002]	Jumper I 2,5 TD (107)	THX	107	1997	2001
Citroen	Jumper [1994 - 2002]	Jumper I 2,8 HDI	8140.43S	128	2000	2002
Citroen	Jumpy [1996 - 2007]	Jumpy 1,6	220A2.000	80	1996	1999
Citroen	Jumpy [1996 - 2007]	Jumpy 1,8	LFW	100	1998	2000
Citroen	Jumpy [1996 - 2007]	Jumpy 1,9 D	D9B	71	1996	1999
Citroen	Jumpy [1996 - 2007]	Jumpy 1,9 D	WJY	70	1998	2007
Citroen	Jumpy [1996 - 2007]	Jumpy 1,9 D	WJZ	70	1998	2007
Citroen	Jumpy [1996 - 2007]	Jumpy 1,9 TD	D8B	92	1996	1999
Citroen	Jumpy [1996 - 2007]	Jumpy 1,9 TD	DHX	90	1996	1999
Citroen	Jumpy [1996 - 2007]	Jumpy 2,0	RFN	136	2000	2007
Citroen	Jumpy [1996 - 2007]	Jumpy 2,0 HDI (110)	RHW	110	2000	2004
Citroen	Jumpy [1996 - 2007]	Jumpy 2,0 HDI (110)	RHZ	110	2000	2004
Citroen	Jumpy [1996 - 2007]	Jumpy 2,0 HDI (95)	RHX	94	2000	2003
Citroen	Jumpy [1996 - 2007]	Jumpy 2,1 TD	P8C	109	1996	2000

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
Daewoo	Lanos	Lanos 1,3	A13SMS	75	1997	2002
Daewoo	Lanos	Lanos 1,5	A15SMS	85	1997	2002
Daewoo	Lanos	Lanos 1,6	A16DMS	106	1997	2002
Fiat	Ducato	Ducato 1,9 D	230A3.000	82	1993	2000
Fiat	Ducato	Ducato 14 - 18 2,5 Diesel	8140.67	85	1994	1994
Fiat	Ducato	Ducato 2,0i 10 - 14 - 18	RFW	110	1994	1998
Fiat	Ducato	Ducato 2,5 DS 10 - 14 - 18	8140.67	84	1994	1998
Fiat	Ducato	Ducato 2,5 TDS 10 - 14 - 18	8140.47	116	1994	1999
Fiat	Ducato	Ducato 2,8 id 10 - 14 - 18	8140.63	87	1998	2002
Fiat	Ducato	Ducato 2,8 JTD	8140.43S	125	2000	2002
Fiat	Ducato	Ducato 2,8 TDid 10 - 14 - 18	8140.43	122	1998	2000
Fiat	Grande Punto	Grande Punto 1,2	199A4.000	65	2005	2008
Fiat	Grande Punto	Grande Punto 1,3 JTD (75 HK)	199A2.000	75	2005	2008
Fiat	Grande Punto	Grande Punto 1,3 JTD (90 HK)	199A3.000	90	2005	2008
Fiat	Grande Punto	Grande Punto 1,4 16V	199A6.000	95	2005	2008
Fiat	Grande Punto	Grande Punto 1,4 16V T-Jet	198A4.000	120	2007	2008
Fiat	Grande Punto	Grande Punto 1,4 8V	350A1.000	77	2005	2008
Fiat	Grande Punto	Grande Punto 1,9 JTD (120 HK)	939A1.000	120	2005	2008
Fiat	Grande Punto	Grande Punto 1,9 JTD (130 HK)	199A5.000	130	2005	2008
Fiat	Grande Punto	Grande Punto Abarth	198A8.000	150	2007	2008
Fiat	Grande Punto	Grande Punto Abarth Esseesse	198A8.000	180	2008	2008
Fiat	Scudo [96 - 06]	Scudo 1,6	220A2.000	79	1996	2004
Fiat	Scudo [96 - 06]	Scudo 1,9D	D9B	69	1996	2002
Fiat	Scudo [96 - 06]	Scudo 1,9D	WJZ	69	1998	2002
Fiat	Scudo [96 - 06]	Scudo 1,9TD	D8B	92	1996	2004
Fiat	Scudo [96 - 06]	Scudo 2,0 JTD 16V	RHW	109	2002	2007
Fiat	Scudo [96 - 06]	Scudo 2,0 JTD 8V	RHX	94	1999	2007
Fiat	Scudo [96 - 06]	Scudo 2,0 JTD 8V	RHZ	109	1999	2007
Lancia	Ypsilon [1996 - 2003]	Ypsilon 1,2	840A3.000	60	1997	2002
Lancia	Ypsilon [1996 - 2003]	Ypsilon 1,4	840A2.000	80	1997	2000
Lancia	Ypsilon [1996 - 2003]	Ypsilon 1,4	840A4.000	75	1996	2000
Mercedes	A-Class [169]	A 150	266.920	95	2004	2008
Mercedes	A-Class [169]	A 160 CDI	640.942	82	2004	2008
Mercedes	A-Class [169]	A 170	266.940	116	2004	2008
Mercedes	A-Class [169]	A 180 CDI	640.940	109	2004	2008
Mercedes	A-Class [169]	A 200	266.960	136	2004	2008
Mercedes	A-Class [169]	A 200 CDI	640.941	140	2004	2008

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
Mercedes	A-Class [169]	A 200 turbo	266.980	193	2004	2008
Peugeot	Boxer [1994 - 2002]	Boxer 1,9 D	D8C	65	1994	2002
Peugeot	Boxer [1994 - 2002]	Boxer 1,9 TD	DHX	90	1995	2000
Peugeot	Boxer [1994 - 2002]	Boxer 1,9 TD	DHY	90	1994	2002
Peugeot	Boxer [1994 - 2002]	Boxer 1,9 TD Combi	D8C	92	1994	1999
Peugeot	Boxer [1994 - 2002]	Boxer 2,0i	RFW	110	1994	2001
Peugeot	Boxer [1994 - 2002]	Boxer 2,5 D Kombi	T9A	86	1993	2001
Peugeot	Boxer [1994 - 2002]	Boxer 2,5 TD	T8A	103	1993	1998
Peugeot	Boxer [1994 - 2002]	Boxer 2,5DT	THX	107	1997	2001
Peugeot	Boxer [1994 - 2002]	Boxer 2,8 HDI	8140.43S	125	2000	2002
Peugeot	Expert [97-06]	Expert 1,6i	222A2.000	79	1996	1998
Peugeot	Expert [97-06]	Expert 1,9 D	D9B	69	1995	2001
Peugeot	Expert [97-06]	Expert 1,9 D	WJY	70	1998	2006
Peugeot	Expert [97-06]	Expert 1,9 D	WJZ	69	1998	2006
Peugeot	Expert [97-06]	Expert 1,9 TD	D8B	92	1995	1998
Peugeot	Expert [97-06]	Expert 1,9 TD	DHX	90	1996	2006
Peugeot	Expert [97-06]	Expert 2,0 HDI	RHW	110	2000	2006
Peugeot	Expert [97-06]	Expert 2,0 HDI	RHX	94	2000	2006
Peugeot	Expert [97-06]	Expert 2,0 HDI	RHZ	110	2000	2006
Peugeot	Expert [97-06]	Expert 2,0i	RFN	136	2000	2006
Renault	Modus	Modus 1,2	D4F 740	75	2004	2008
Renault	Modus	Modus 1,4	K4J 770	98	2004	2008
Renault	Modus	Modus 1,5 dCi (106)	K9K 764	106	2005	2006
Renault	Modus	Modus 1,5 dCi (68)	K9K 768	68	2005	2008
Renault	Modus	Modus 1,5 dCi (86)	K9K 766	86	2005	2008
Renault	Modus	Modus 1,6 (112)	K4M 790	112	2004	2008
Renault	Modus	Modus 1,6 (112)	K4M 791	112	2004	2008
Renault	Modus	Modus 1,6 (88)	K4M 794	88	2004	2008
Seat	Leon [2005 -]	Leon 1,6	BSE	102	2005	2008
Seat	Leon [2005 -]	Leon 1,6	BSF	102	2005	2008
Seat	Leon [2005 -]	Leon 1,9 TDI (PDI)	BKC	105	2005	2008
Seat	Leon [2005 -]	Leon 1,9 TDI (PDI)	BLS	105	2005	2008
Seat	Leon [2005 -]	Leon 1,9 TDI (PDI)	BXE	105	2005	2008
Seat	Leon [2005 -]	Leon 2,0 FSI	BLR	150	2005	2008
Seat	Leon [2005 -]	Leon 2,0 FSI	BLY	150	2005	2008
Seat	Leon [2005 -]	Leon 2,0 FSI	BVY	150	2005	2008
Seat	Leon [2005 -]	Leon 2,0 FSI	BVZ	150	2005	2008

## Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
Seat	Leon [2005 -]	Leon 2,0 TDI (PDI)	AZV	136	2005	2008
Seat	Leon [2005 -]	Leon 2,0 TDI (PDI)	BKD	140	2005	2008
Seat	Leon [2005 -]	Leon 2,0 TDI (PDI)	BMM	140	2005	2008
Seat	Leon [2005 -]	Leon 2,0 TDI (PDI)	BMN	170	2005	2008
Seat	Leon [2005 -]	Leon 2,0 TFSI (185 HK)	BWA	185	2005	2008
Seat	Leon [2005 -]	Leon 2,0 TFSI (200 HK)	BWA	200	2005	2008
Saab	9-3 [2003 -]	9-3 1,8 i	Z18XE	122	2004	2008
Saab	9-3 [2003 -]	9-3 1,9 TiD	Z19DT	120	2004	2008
Saab	9-3 [2003 -]	9-3 1,9 TiD	Z19DTH	150	2004	2008
Saab	9-3 [2003 -]	9-3 2,0 T	B207R	210	2003	2008
Saab	9-3 [2003 -]	9-3 2,0t	B207E	150	2003	2008
Saab	9-3 [2003 -]	9-3 2,0t	B207L	175	2003	2008
Saab	9-3 [2003 -]	9-3 2,2TiD	D223L	125	2003	2008
Saab	9-3 [2003 -]	9-3 2,8 Turbo V6	B284E	230	2006	2008
Saab	9-3 [2003 -]	9-3 2,8 Turbo V6	B284L	250	2005	2008
Toyota	Avensis II [2003 -]	Avensis 1.6	3ZZ-FE	110	2003	2008
Toyota	Avensis II [2003 -]	Avensis 1.8	1ZZ-FE	129	2003	2008
Toyota	Avensis II [2003 -]	Avensis 2.0 D4	1AZ-FSE	147	2003	2008
Toyota	Avensis II [2003 -]	Avensis 2.0 D-4D	1AD-FTV	126	2006	2008
Toyota	Avensis II [2003 -]	Avensis 2.0 D-4D	1CD-FTV	116	2003	2005
Toyota	Avensis II [2003 -]	Avensis 2.2 D-4D	2AD-FTV	150	2005	2008
Toyota	Avensis II [2003 -]	Avensis 2.2 D-4D-cat	2AD-FHV	177	2005	2008
Toyota	Avensis II [2003 -]	Avensis 2.4 D4	2AZ-FSE	163	2003	2008
Volkswagen	Passat V [2005 -]	Passat 1,6 FSI	BLF	115	2005	2008
Volkswagen	Passat V [2005 -]	Passat 1,6i	BSE	102	2005	2008
Volkswagen	Passat V [2005 -]	Passat 1,6i	BSF	102	2005	2008
Volkswagen	Passat V [2005 -]	Passat 1,9 TDI (PDI)	BKC	105	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 FSI	BLR	150	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 FSI	BLX	150	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 FSI	BLY	150	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI)	BMP	140	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BKP	140	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BMA	136	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BMR	170	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BUZ	163	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BVE	122	2005	2008
Volkswagen	Passat V [2005 -]	Passat 2,0 TDI (PDI) 16V	BWV	120	2006	2008

Wiring diagram news

Make	Model series	Model	Engine	HP	From year	Up to year
Volkswagen	Passat V [2005 -]	Passat 2,0i TFSI	AXX	200	2005	2008
Volkswagen	Transporter [2003 -]	Transporter 1,9 TDI (PDI)	AXB	105	2003	2008
Volkswagen	Transporter [2003 -]	Transporter 1,9 TDI (PDI)	AXC	86	2003	2008
Volkswagen	Transporter [2003 -]	Transporter 2,0i	AXA	115	2003	2008
Volkswagen	Transporter [2003 -]	Transporter 2,5 TDI (PDI)	AXD	130	2003	2008
Volkswagen	Transporter [2003 -]	Transporter 2,5 TDI (PDI)	AXE	174	2003	2008
Volkswagen	Transporter [2003 -]	Transporter 2,5 TDI (PDI)	BLJ	163	2003	2008